

**COOKING**  
SURFACE PRIME



# COOKWARE BY COOKING SURFACE




[www.cookingsurface.com](http://www.cookingsurface.com)

# COOKWARE

## by COOKING SURFACE

### Content:

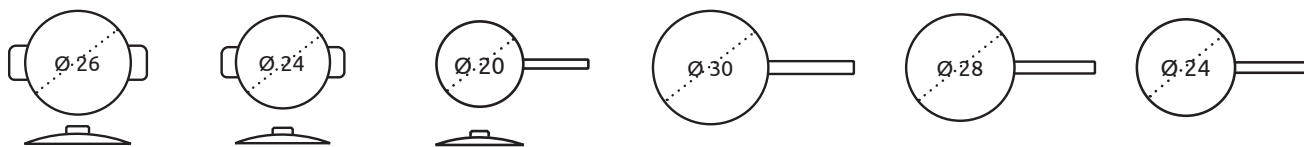

Pot 26x15cm	Pot 24x14cm	Pot 20x10cm	Pan 30x5,5cm	Pan 28x5cm	Pan 24x4,5cm
----------------	----------------	----------------	-----------------	---------------	-----------------

### Introduction:

The selected cookware is of the highest quality, please familiarize yourself with the product before using it for the first time, please refer carefully to the operating instructions and the safety tips below. Use the product only according to the instructions and only for the indicated field of application. Keep these instructions in a safe place.

If you transfer the product to someone else, be sure to pass all your documentation as well.

### Proper use:

The product is only suitable for private or domestic use, not for professional purposes.

### Safety instructions:

#### **WARNING, DANGER AND RISK OF ACCIDENT FOR CHILDREN!**

- Never leave children unsupervised with the packaging material due to the risk of suffocation.
- Keep children away from the product.
- WARNING: Never leave children unsupervised near hot cooking equipment.
- WEAR SAFETY GLOVES! The product becomes very hot during cooking, as a tip use pot holders or gloves.
- Never heat utensils at maximum power if they previously contain grease, as this is a risk of overheating, if this happens, turn off your induction hob immediately.
- Pots should never be left unattended. Oil and some foods can overheat and lead to fire risk.
- In the event of a fire involving any of the contents, do not extinguish the burning fat with water, suffocate flames with a blanket or use a fire extinguisher.
- Do not rinse the product with cold water.
- Do not heat the product if it is empty.

- Heat the product at a moderate temperature.
- Do not slide or drag the product across the porcelain, it is preferable to lift or elevate it at each movement so as not to damage the material.
- Do not cut into the product. Use wooden or plastic utensils.
- Do not overheat the product. If an overheating of the appliance arises, ventilate the area well.
- High temperatures can discolor the exterior of the product.

### *Before first use:*

- Boil water in the product twice and clean it with a little laundry soap.
- Specific use for induction hobs.
- Induction cooking may result in a technical hum, this sound does not indicate a fault on your hob or on the product. Does not affect cooking performance

### *Hygiene and product care:*

- Allow the product to cool down properly after use before cleaning.
- Never use scourers or abrasive products for cleaning.
- It is essential to clean the product after each use with hot water, a dishwasher and a sponge.
- Over time, the minerals in the water can cause stains or discoloration on the product. You can get rid of these spots by rubbing half a lemon on them. For stubborn stains can be cleaned with a mixture of nine parts water to one part of vinegar.

### *Disposal:*

The packaging is made entirely of recyclable materials, which can be disposed of at local recycling facilities. Contact your local garbage disposal authority for more details on how to dispose of your used packaging.

### *Warranty:*

The product has been manufactured with strict quality guidelines and meticulously examined before delivery. The warranty for this product is 2 years from the date of purchase, if the products show a defect in material or manufacturing make use of your warranty before use your product.

In order to need legal communication with Cooking Surface, you should contact:

#### ***Arbe Stolanic S.L.***

*Calle Gregal, 27 Pol. Ind. Los Vientos*

*46119 Náquera (Valencia) Spain*

**COOKING**  
SURFACE PRIME



[info@cookingsurface.com](mailto:info@cookingsurface.com)

[www.cookingsurface.com](http://www.cookingsurface.com)